




Step 1 - Install Battery Mount

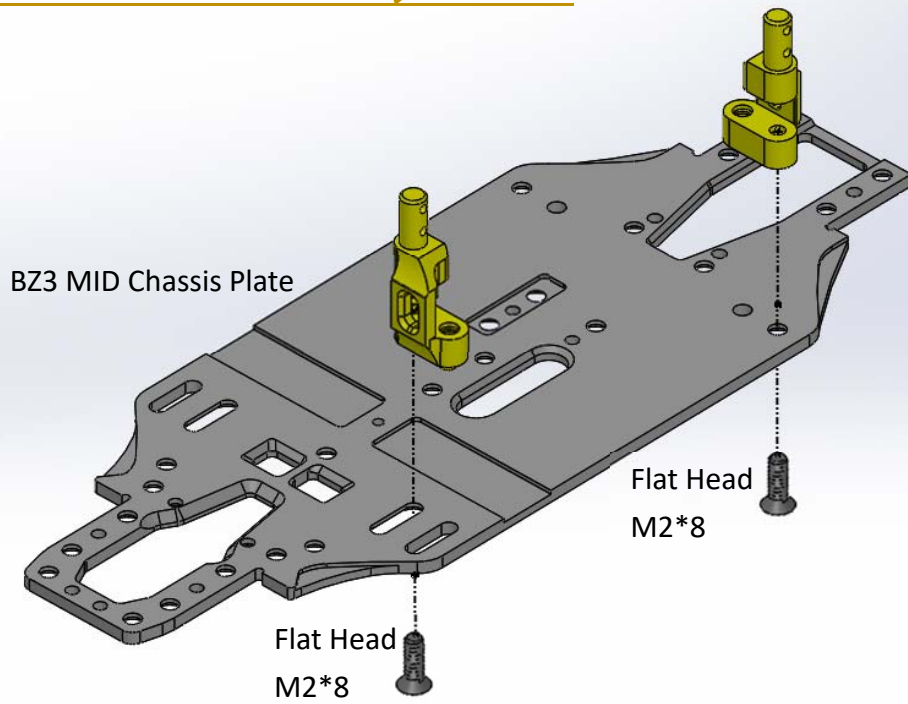


Step 2 - Choose the Battery Clip

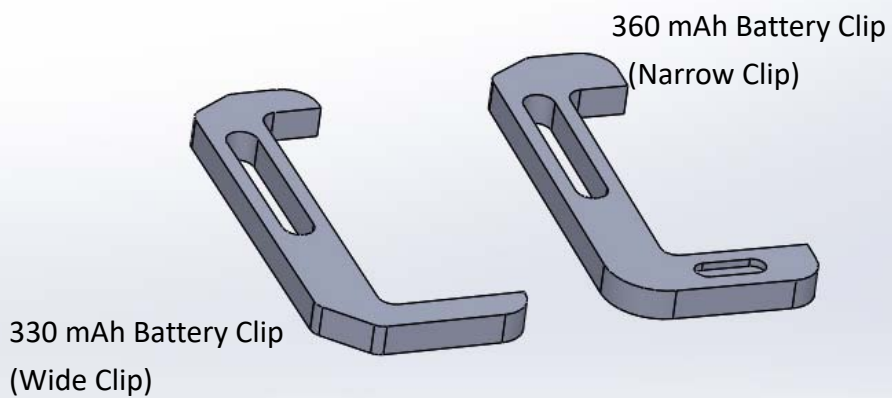


Step 3 - Install the Battery Clip

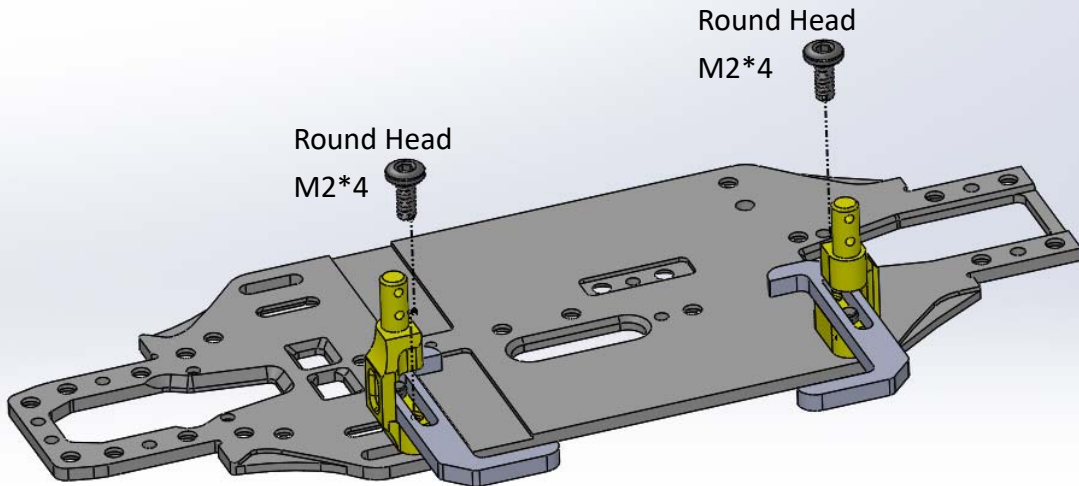

Step 4 - Top Battery Mount

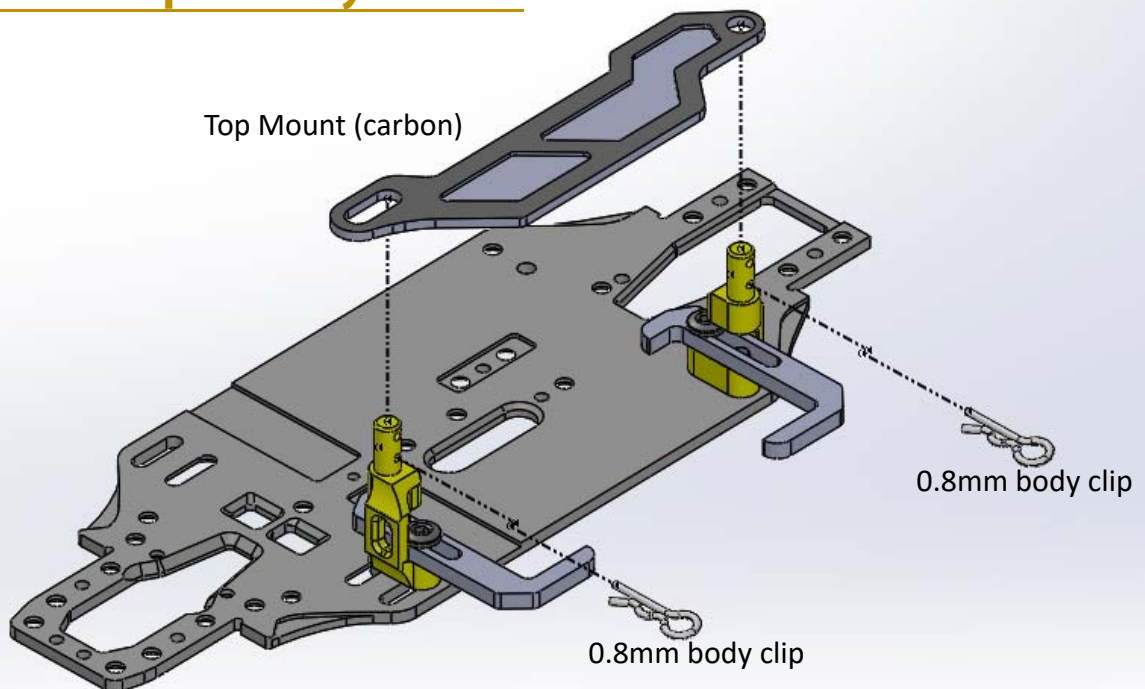


Step 5 - Motor and Servo Mount

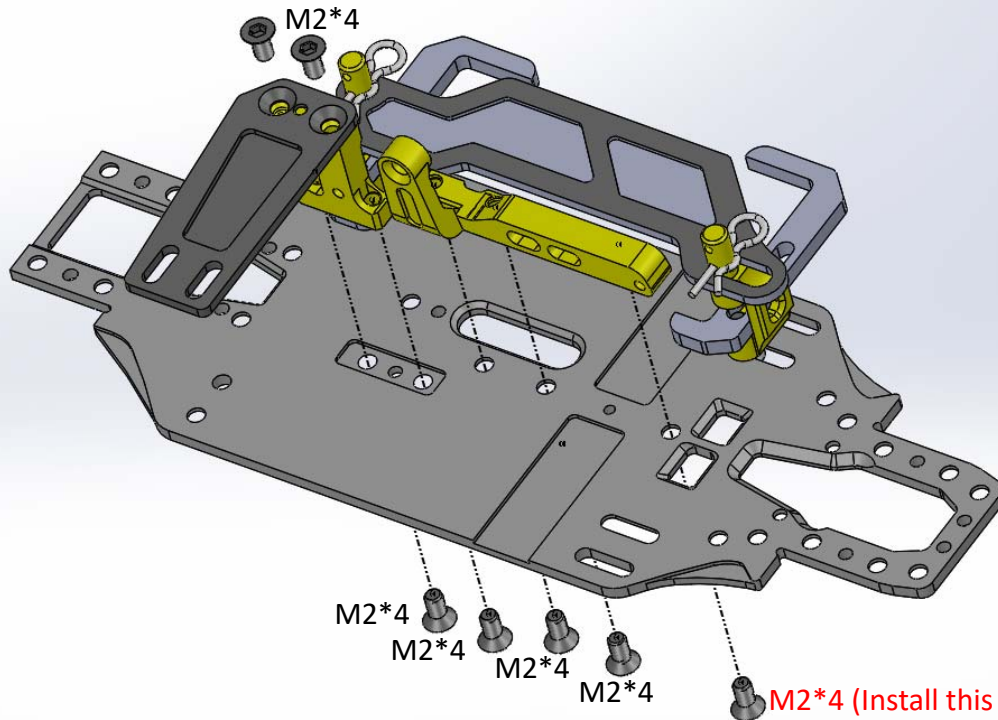

M2*4 (Install this screw, will add stability, but less steering.)

Step 6 - Ball Differential and Belt

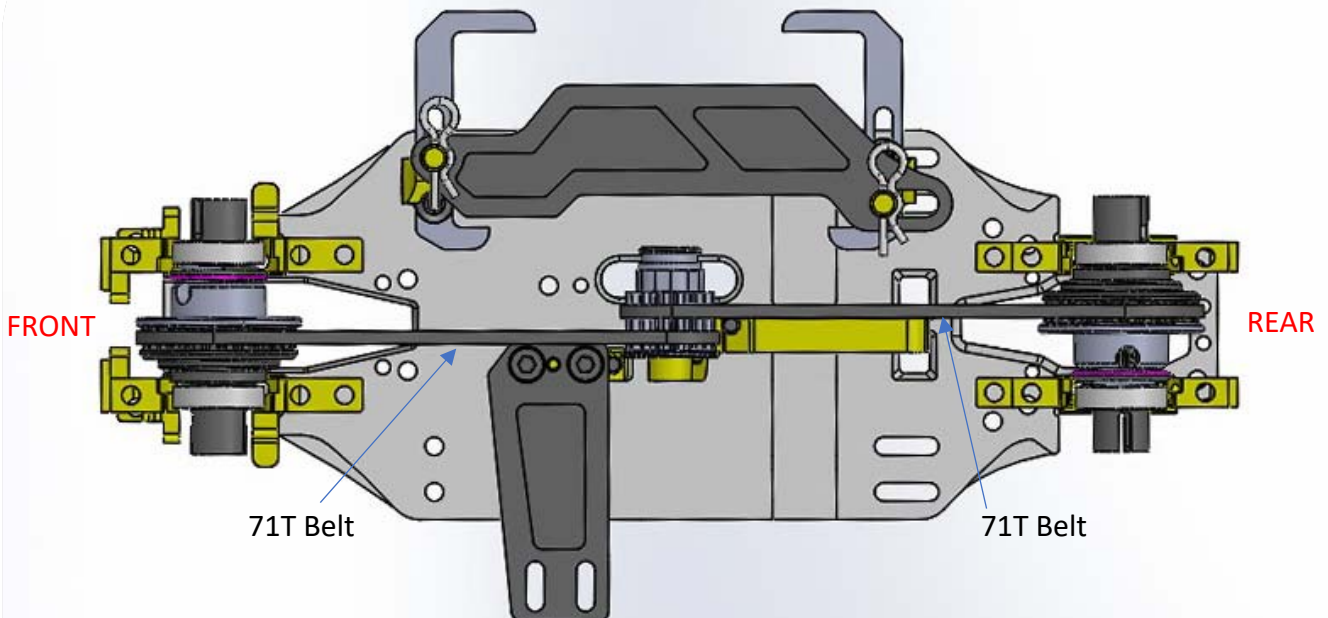

*** Pay attention to the belt and ball diff orientations, it is different from stock BZ3.

Install other parts as referring to the original BZ3 instruction manual.

