

MRZ-UP01 – Metal Servo Saver

Before installation, switch on the system and set the servo to neutral position.

