



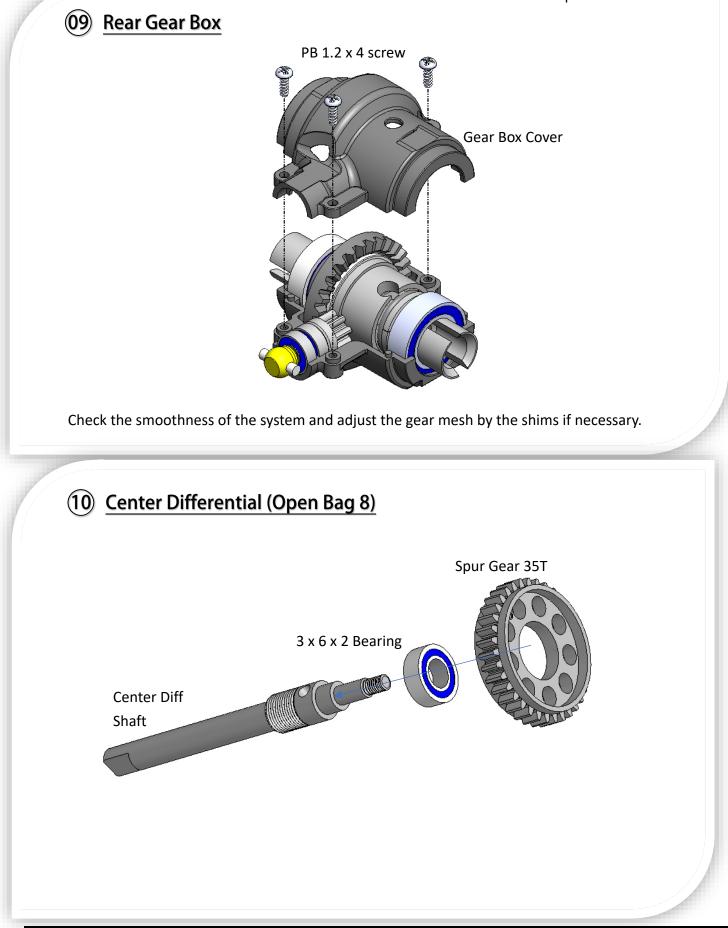


Spur Gear 35T

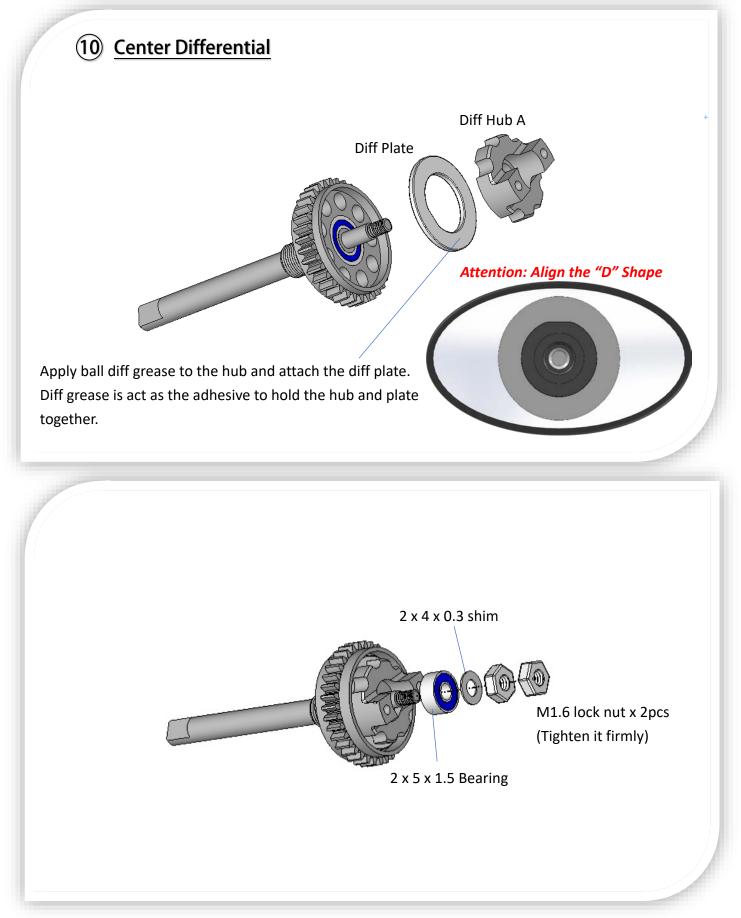









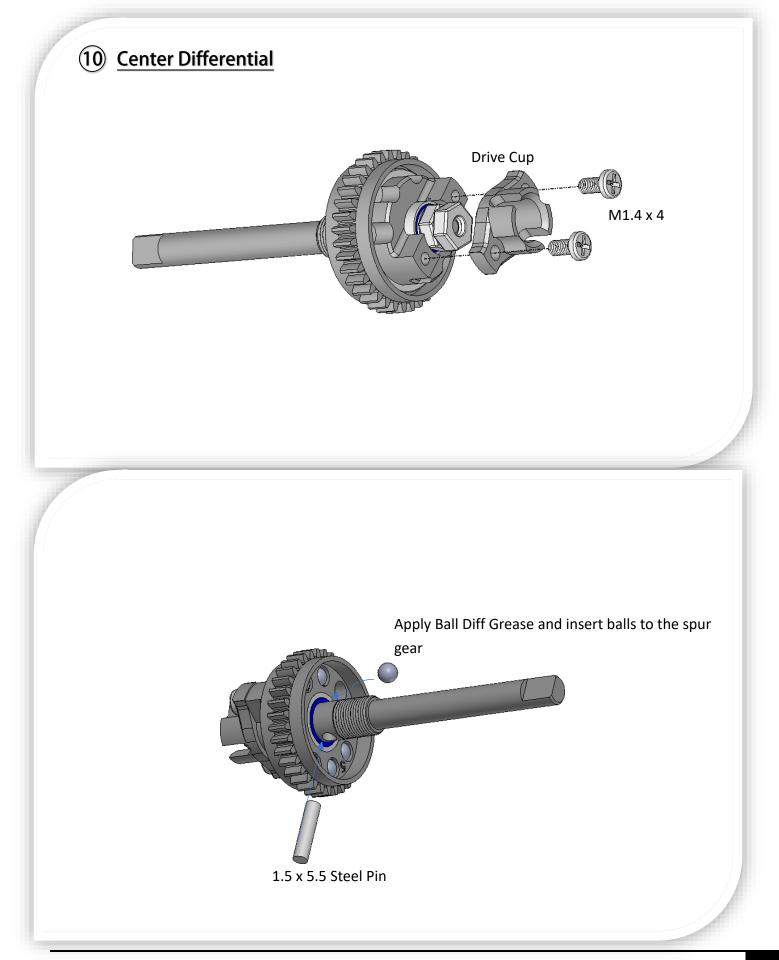




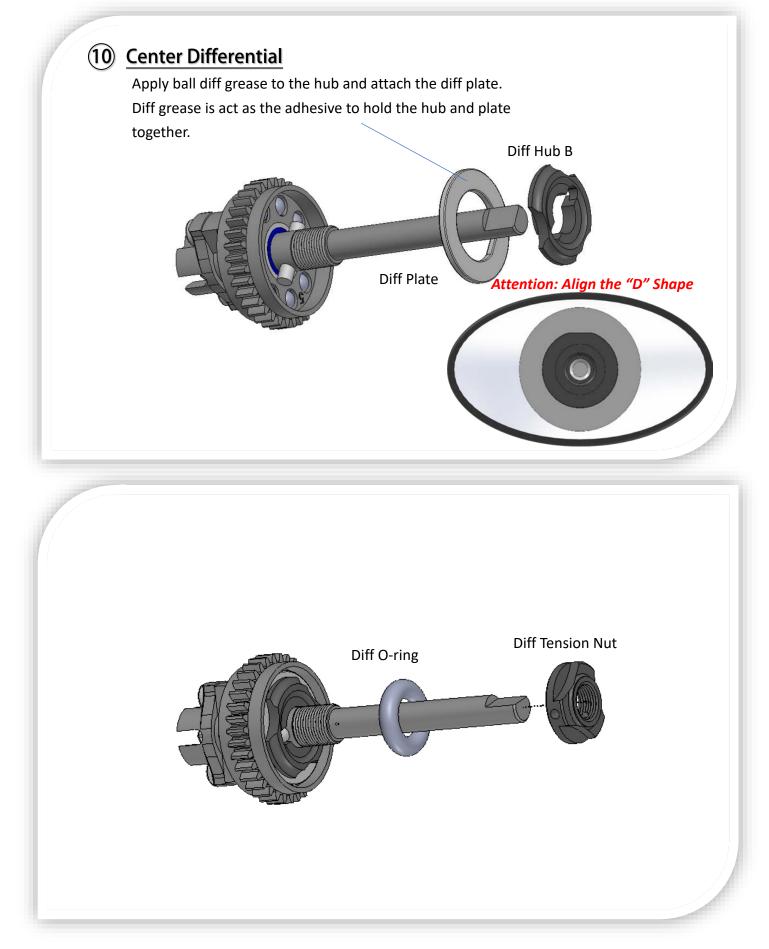




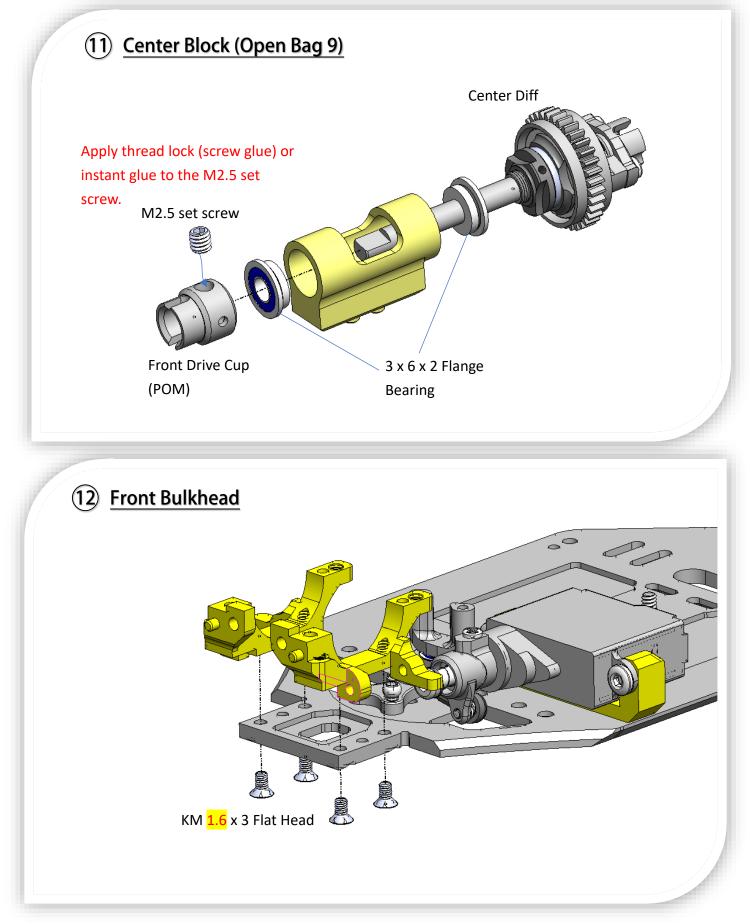


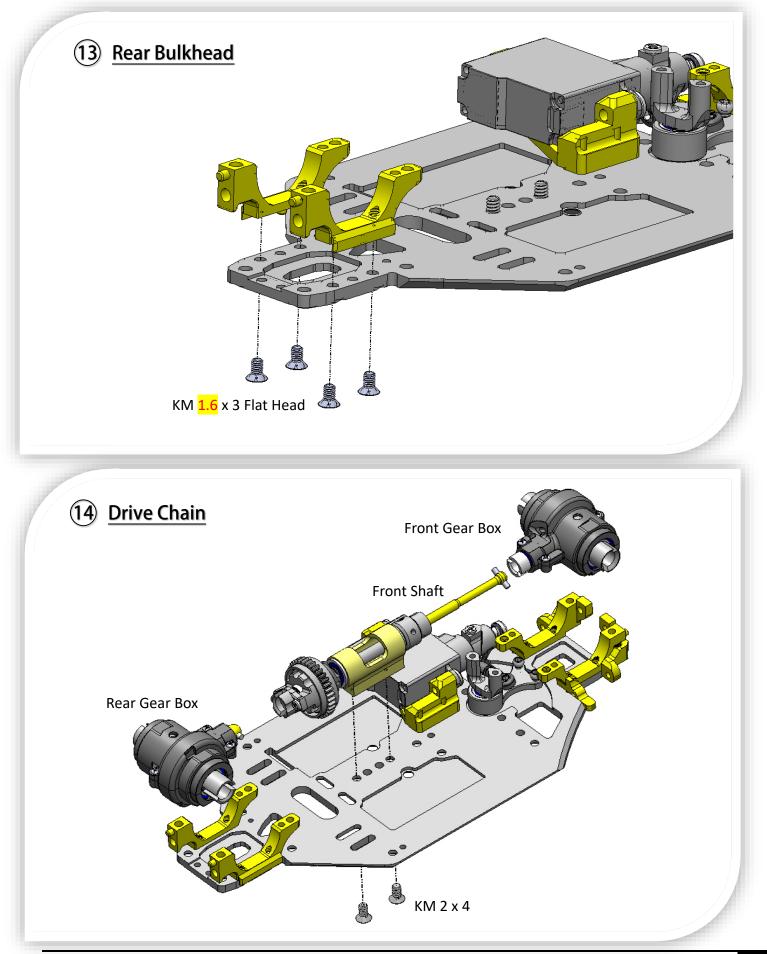



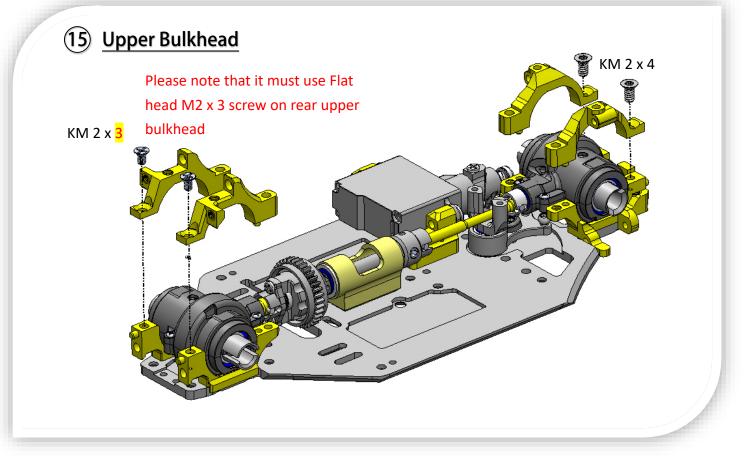



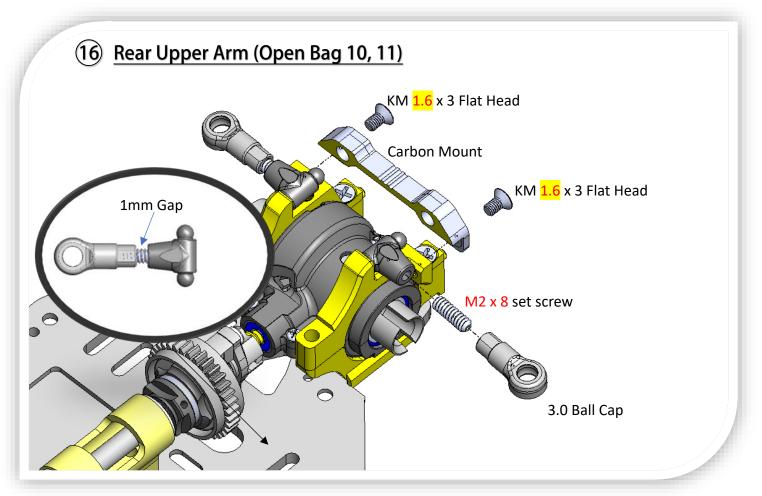


#### **Caution:**


If the Upper arm is not moving freely, please use sandpaper to grind the "tip of the ball head". To remove burr (or raised edge) of the plastic ball head. Make sure the upper arm is moving freely.






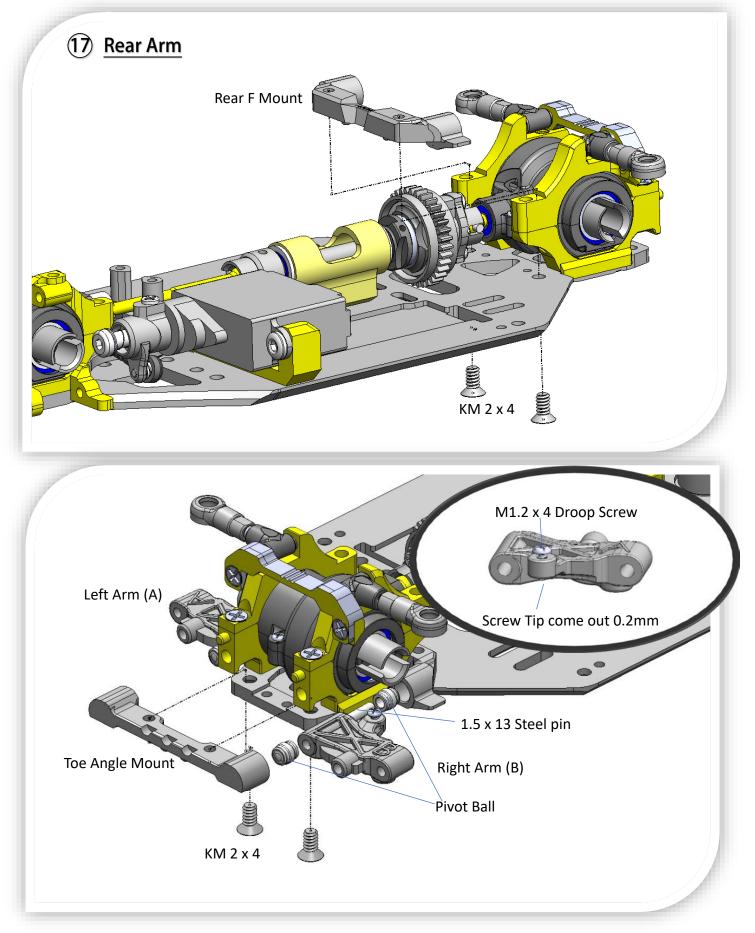




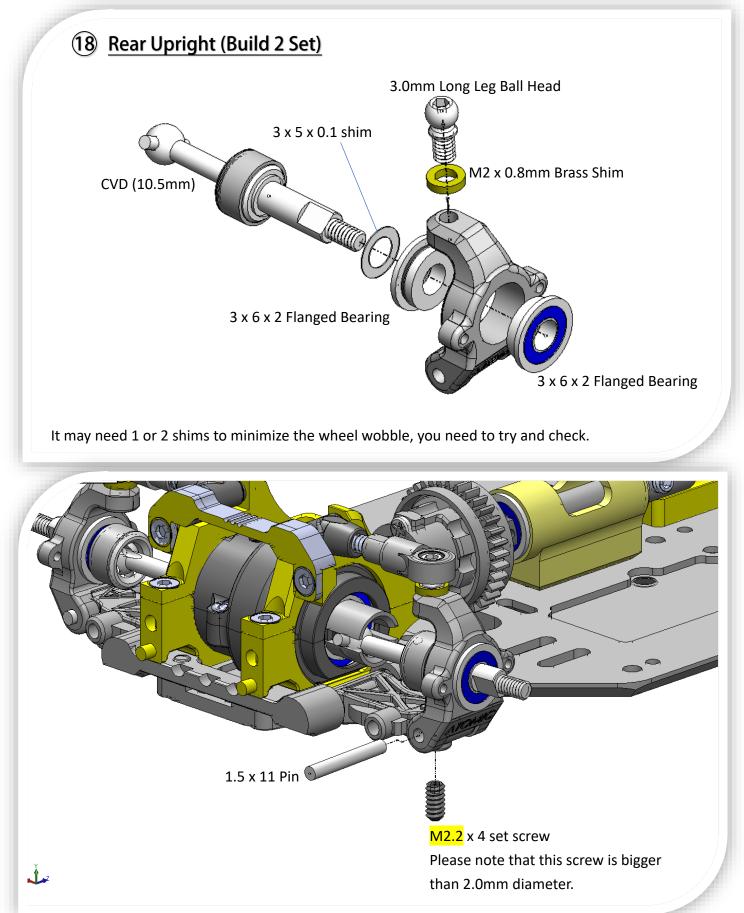



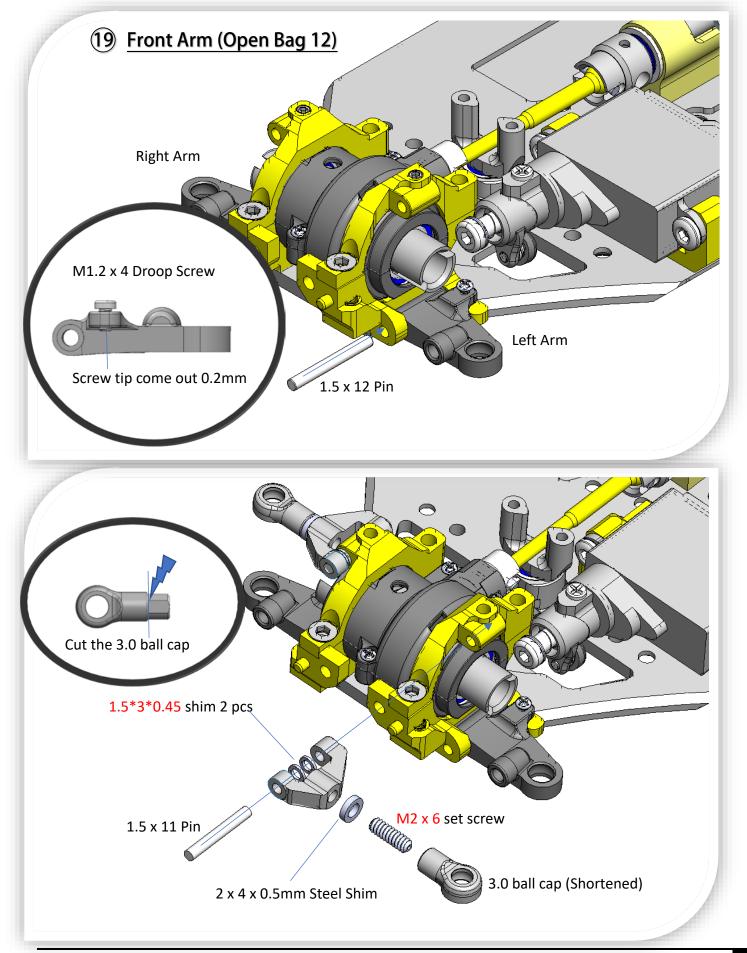




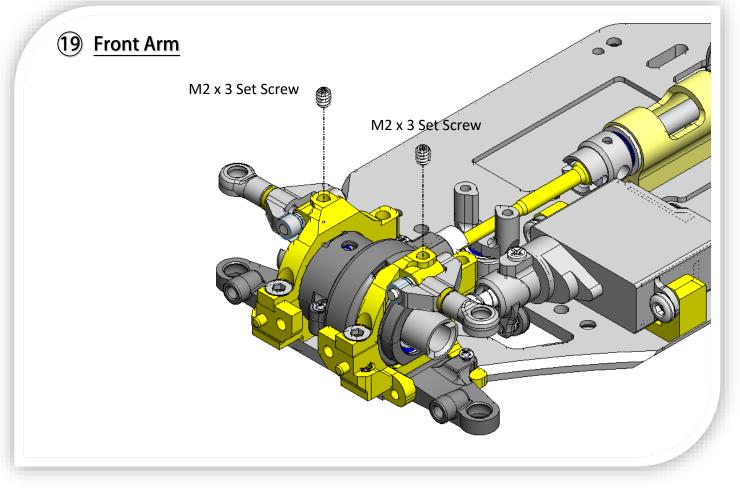


### Note the position of the 0.45mm shims define the caster angle


More Caster Angle will result in more steering. Stock 1 degree is a good starting point.

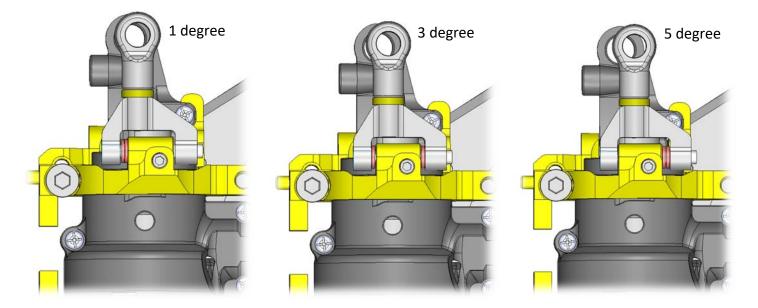




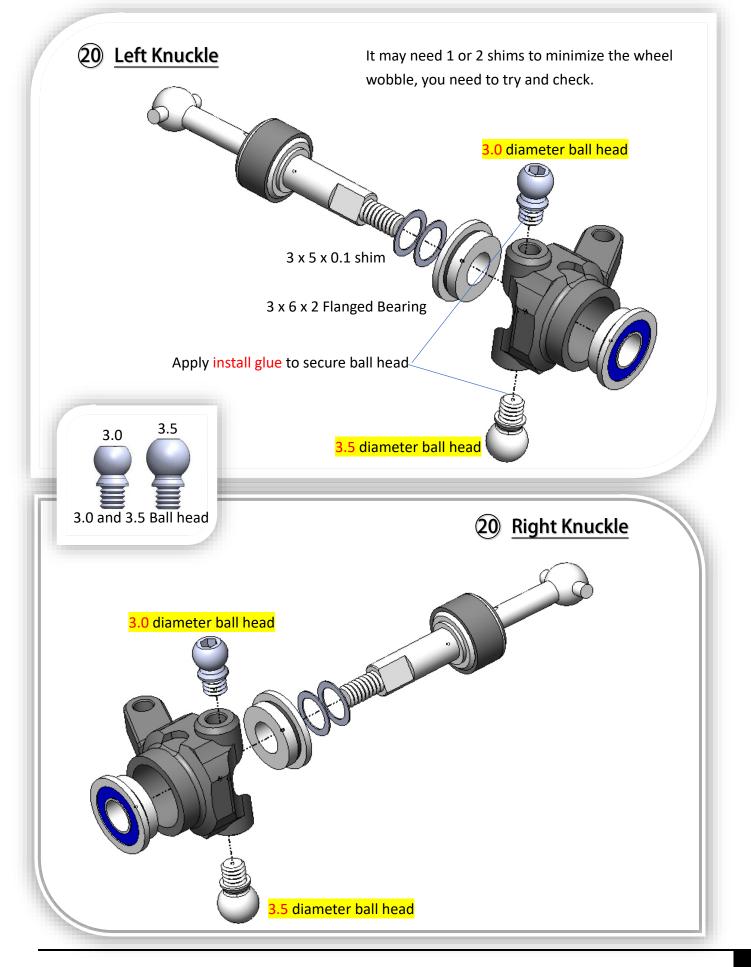




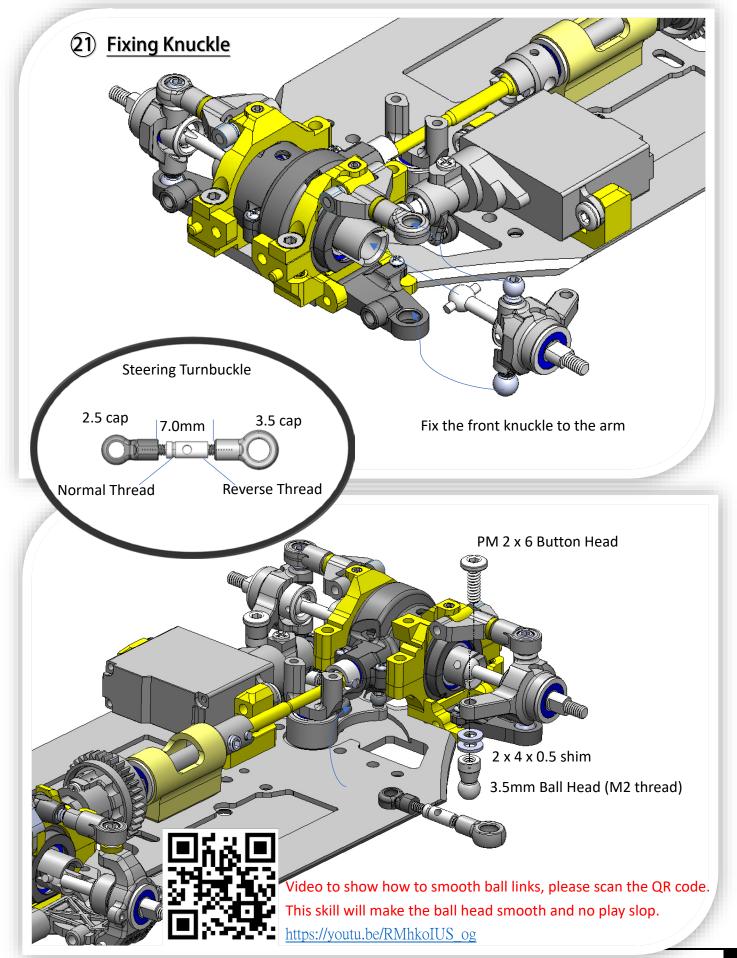


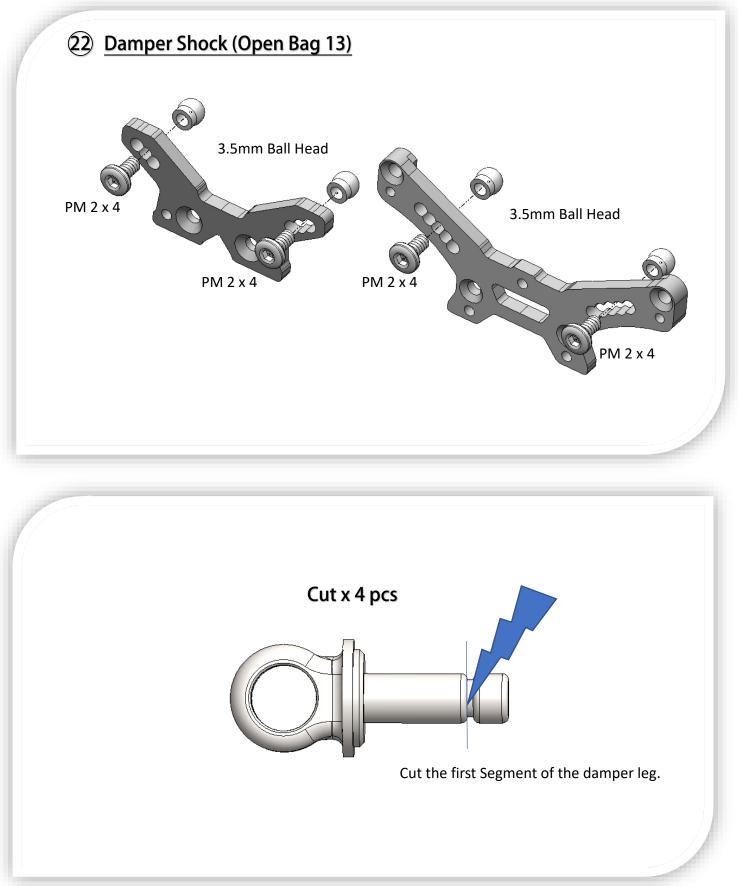




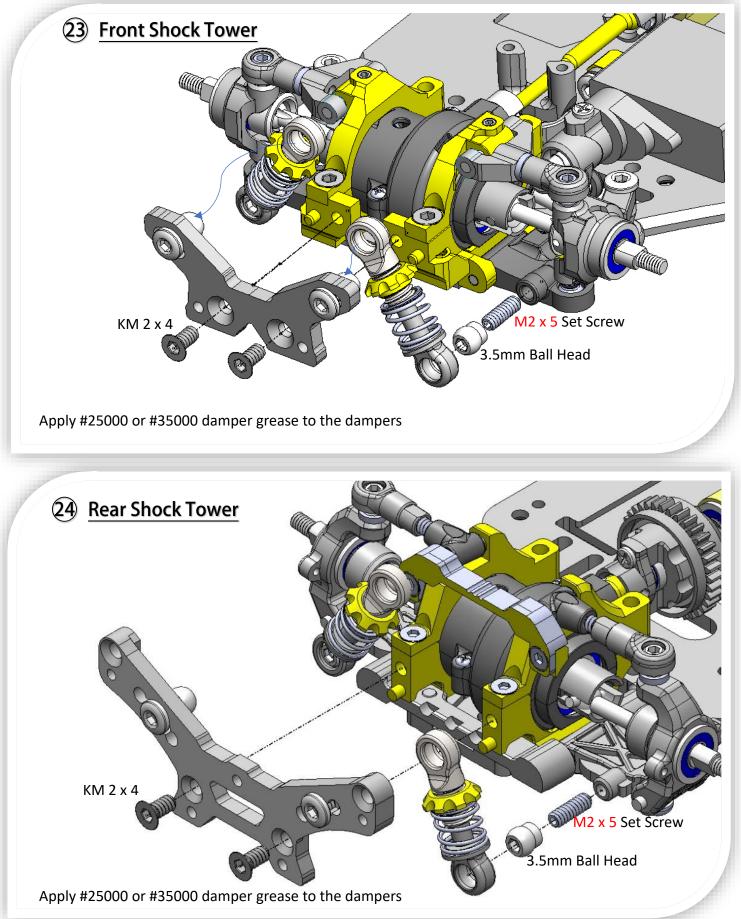




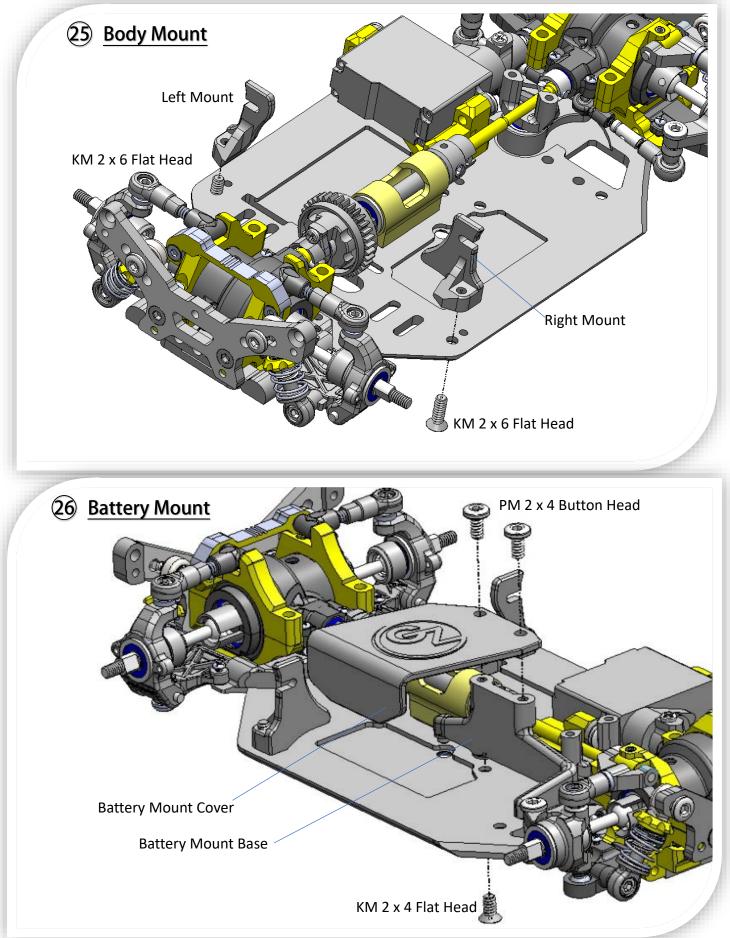



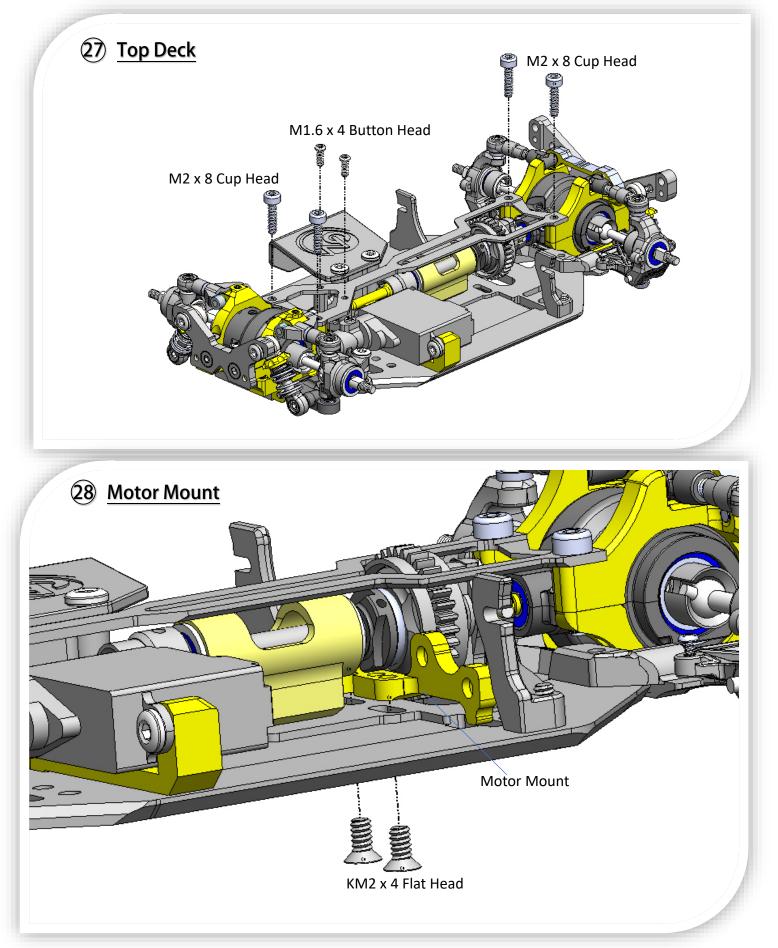



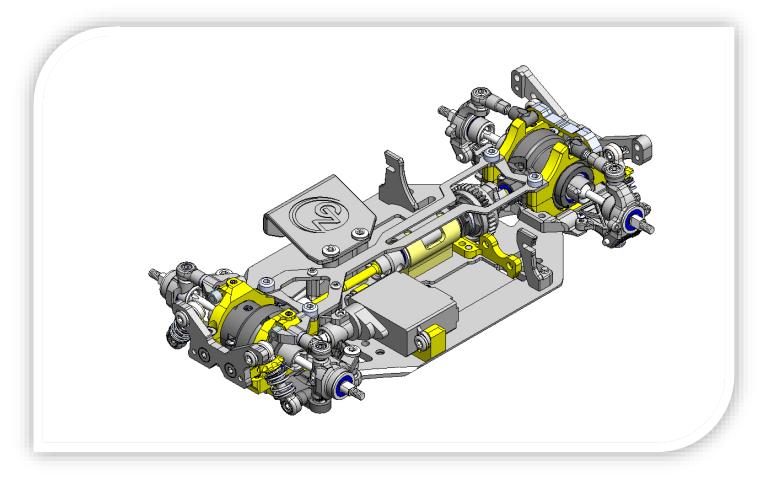

### Gear Ratio Chart – SZ2

SZ2	Pinion	<mark>23T</mark>	<mark>24T</mark>	<mark>25T</mark>	<mark>26T</mark>	<mark>27T</mark>	<mark>28T</mark>	<mark>29T</mark>	<mark>30Т</mark>	<mark>31T</mark>	<mark>32T</mark>
Spur	<mark>35T</mark>	5.33	5.10	4.90	4.71	4.54	4.38	4.22	4.08	3.95	3.83

Recommended Gear Ratio: 3500KV : 4.08 to 3.83 4500KV : 4.54 to 4.22 5500KV : 4.90 to 4.71

6500KV : 5.33 to 5.10

# 

## SZ2-KIT SZ2 4WD Chassis Kit instruction manual Optional Parts List

SZ2-UP01	SZ2 Spring Steel Chassis Plate (35 gram)
SZ2-UP02	SZ2 Alu. Servo Horn (servo saver)
SZ2-UP03	SZ2 Front Sway Bar
SZ2-UP04	SZ2 Rear Shock Extender
SZ2-UP05	SZ2 Alu. Shock Tower (F+R)
SZ2-UP06	SZ2 Long Damper Set (F+R)
SZ2-UP07	SZ2 Rear Alu. Arms
SZ2-UP08	SZ2 Alu Ball Diff
SZ2-UP09	SZ2 Carbon Battery Mount
SZ2-UP10	SZ2 Alu. Steering Crank
SZ2-UP11	SZ2 Alu. Center Diff Hub
SZ2-UP12XS	SZ2 Spring -Extra Soft (Black)
SZ2-UP12S	SZ2 Spring -Soft (Gold)
SZ2-UP12M	SZ2 Spring -Medium (Red)
SZ2-UP12H	SZ2 Spring -Hard (Silver)
SZ2-UP12XH	SZ2 Spring -Extra Hard (Blue)
SZ2-UP13-27	Motor Pinion 27T-64DP
SZ2-UP13-28	Motor Pinion 28T-64DP
SZ2-UP13-29	Motor Pinion 29T-64DP
SZ2-UP14	SZ2 Aluminium Chassis Plate (20 gram)