




Atomic Mini-Z Tire Warmer

www.rcatomic.com

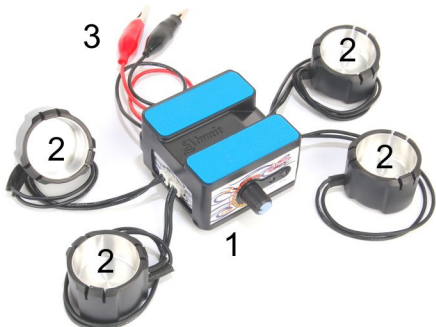

1. Main Unit with Temperature Control Knob and Indicator Lights

2. Warming Caps

3. 12V DC Input Wires

Operating Steps



Temperature Indicator Control Indicator Lights

1. Plug in 4 Warming Caps to the Tire Warmer Main Unit.

NOTE:

There is a 4 wire plug with Temperature sensor which should connect to the associated 4 pin connector of the Main Unit.

2. Turn Temperature Control Knob to Minimum or "0" before connecting to 12V DC Power Supply.
3. Place the Vehicle (Mini Z) securely on the top of the Main Unit.



4. Cover the Tires with the 4 Warming caps.
5. Turn Temperature Knob to the desired temperature ("0"- "9"). There are ten steps with increments of 4°C from "0"(40°C) to "9"(80°C).



6. The Indicator Light will turn off when the preset temperature is reached.
7. Remove Warming Caps and disconnect the 12V Power supply when not in use.

Suggestions

1. Turn the Temperature Knob to Minimum when the unit is not used for about 10 minutes.
2. It is advised to disconnect the 12V Power supply when the unit is not to be used for extended period of time.

Caution !!!

1. Do not place your finger on the Tire Warming Cap interior (Aluminum Portion). High Temperature could burn fingers or skin.



2. Keep Tire Warmer Unit away From Children; Liquid; Chemical or High Temperature area. Do not use Tire warmer for other purpose other than Tire Warming.