


MRZ-UP01 – Metal Servo Saver

Before installation, switch on the system and set the servo to neutral position.

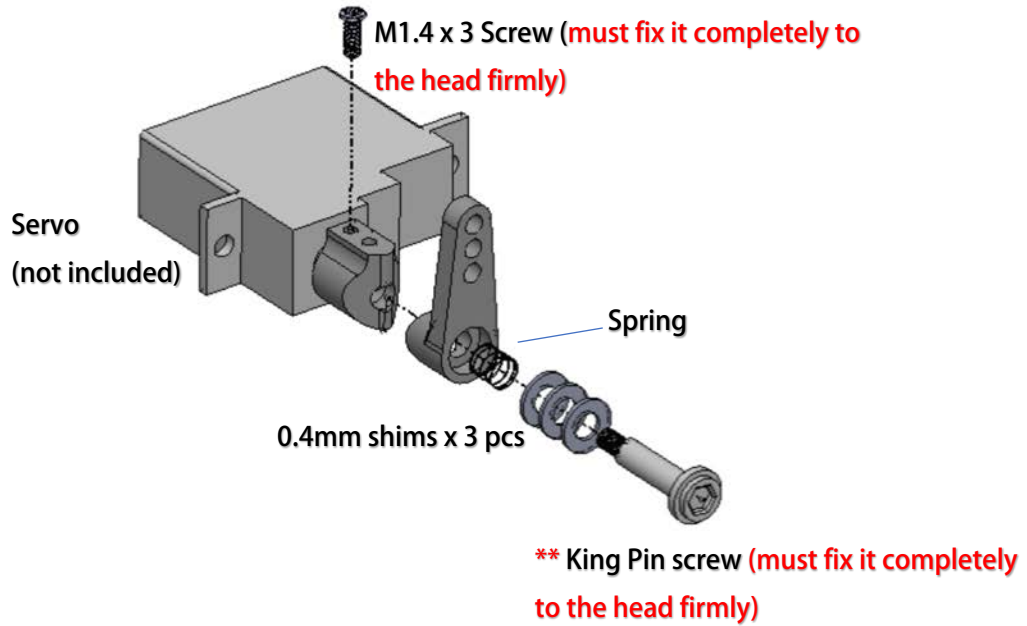

- (1) For BA-82MG, Middle of Bottom Hole is suggested
- (2) For KST X06, Top Hole is recommended.

