

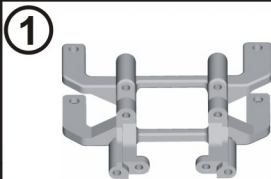
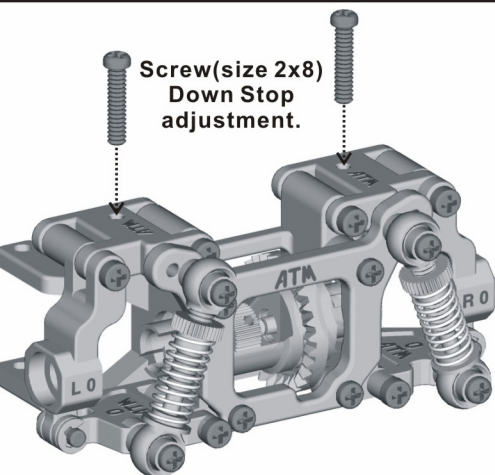
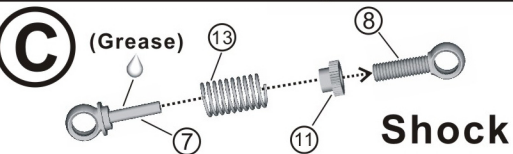
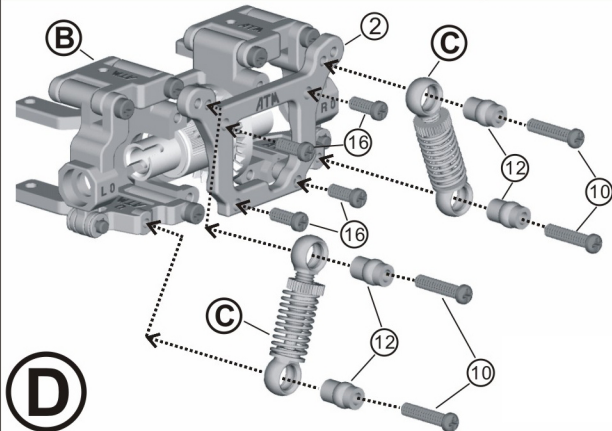


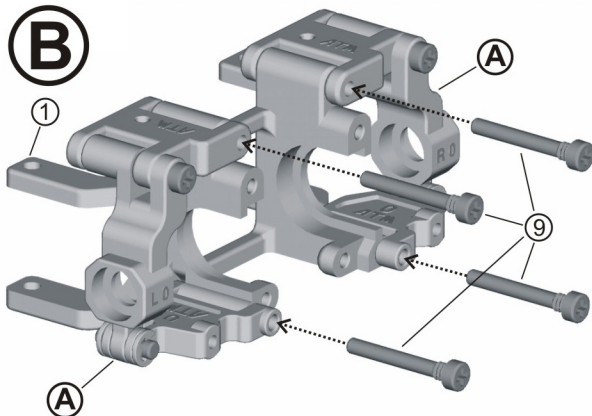


AWD SAS Kit Installation Manual

AWD128

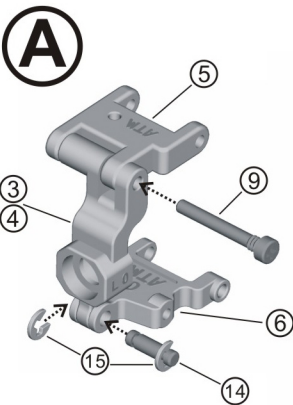

SAS Gear Case
(X1)

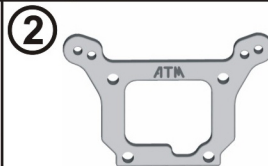


Shock Town
(X1)



Up Right (L)
Toe in (0*) (X1)



Up Right (R)
Toe in (0*) (X1)

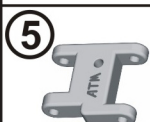


Upper Arm
(X2)



Lower Arm
(Camber 0*) (X2)




Shock
Parts 1 (X2)

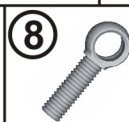

Shock
Parts 2 (X2)



King Pin
Screw (X6)

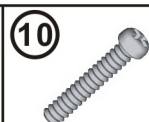

PM Screw
2x9 (X4)



Adjust.
Ring
(X2)



Pivot
Ball
(X4)




Shock
Spring
(X2)



Pin
(for Up Right)
(X2)



E-Ring
(X4)



PB Screw
2x5 (X4)



PM Screw
2x8 (X2)