




MR3-016

MR-03 Reinforced Fast Set-up Lower ARM

www.rcatomic.com


1

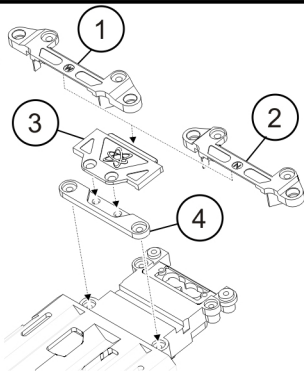

Package Included:

- | | |
|----------------------------|----|
| 1.Front Suspension Arm (W) | x1 |
| 2.Front Suspension Arm (N) | x1 |
| 3.Tie Rod Cover | x1 |
| 4.Suspension Mount | x1 |
| 5.M2 x 3 Screw | x3 |

2

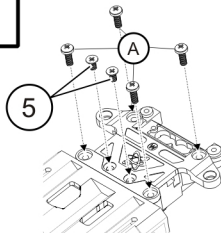

Screw A is not included

Exchange the Tie Rod

- i. Release the M2 x 4 Screw
- ii. Take out the original tie rod
- iii. Replace the new tie rod

